

Sigen EV AC Charger Installation Guide

Sigen EVAC (7, 11, 22) 4G T2 WH
Sigen EVAC (7, 11, 22) 4G T2SH WH

Version: 04
Release date: 2024-11-30




⚠ Caution

- Trained or experienced electrical personnel are required to operate the equipment.
- Operators should be familiar with national/regional laws, regulations and standards, the structure and working principle of relevant systems.
- Please read carefully the operating requirements and precautions in this document and Important Notice before operating. Failure to do so may result in damage to the equipment that is not covered by the warranty.

1 Introduction


Sigen EVAC 7/11/22 4G T2 WH

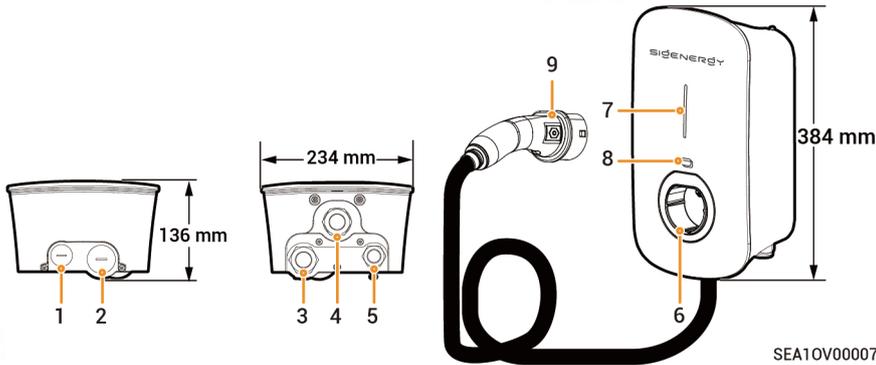

⚠ Caution

- You are advised to connect cables through bottom routing holes (holes 3 and 5).
- If cables are connected through top routing holes (holes 1 and 2), please install the equipment in a sheltered location to prevent water ingress after prolonged water accumulation on the top.

No.	Description	No.	Description
1	Top routing hole for communication cable	2	Top routing hole for AC input cable
3	Bottom routing hole for AC input cable	4	Bottom routing hole for charging cable
5	Bottom routing hole for communication cable	6	Type 2 charging connector holder
7	Indicator	8	Sigen RFID card reading area
9	Charging connector	-	-

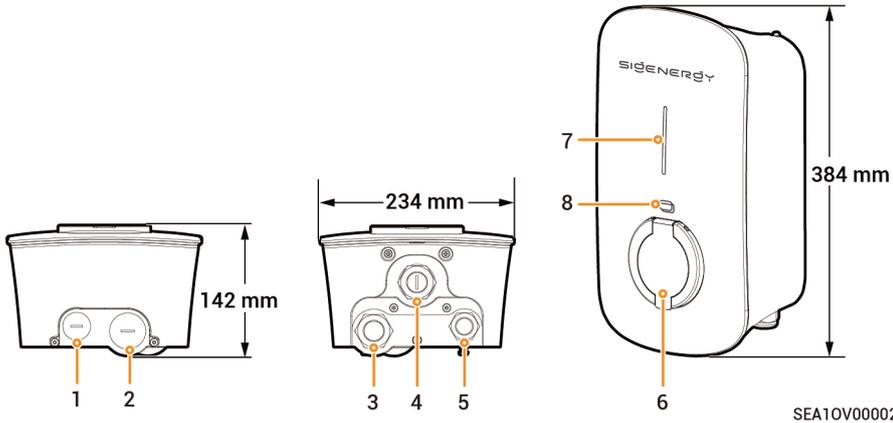

SEA10V00002

⚠ Caution

- You are advised to connect cables through bottom routing holes (holes 3 and 5).
- If cables are connected through top routing holes (holes 1 and 2), please install the equipment in a sheltered location to prevent water ingress after prolonged water accumulation on the top.

No.	Description	No.	Description
1	Top routing hole for communication cable	2	Top routing hole for AC input cable
3	Bottom routing hole for AC input cable	4	(Reserved) Bottom routing hole
5	Bottom routing hole for communication cable	6	Type 2 charger socket with protective door
7	Indicator	8	Sigen RFID card reading area

2 Pre-installation Check

- According to the packing list, check whether the components are complete and in good appearance. If any abnormality occurs, contact your sales agent in time.
- Check personal protective equipment and installation tools to ensure that they are complete; If not, please make them up.
- Check the customer-provided cable to ensure that the quantity and specifications are correct; if not, prepare again.

Protective equipment



Safety hat



Safety glasses



Dust mask



Protective gloves



Insulating gloves



Insulating shoes

Installation tool



Power drill



Vacuum cleaner



Wire cutter



Crimp tool



Crimping pliers



Wire stripper



Scissors



Cable tie



Heat shrinkable sleeve



Heat gun



Insulation screwdriver set



Digital torque open-end wrench



Marker



Rubber mallet



Level



Tape measure

Self-supplied pre-AC switch

Users should prepare type B MCB compliant with IEC/EN 60898 with recommended specifications shown below. Users can omit this requirement if they have installed compliant AC switches.

Model	Number of Poles, MCB	Rated Current, MCB
Sigen EVAC 7 4G T2 WH, Sigen EVAC 7 4G T2SH WH	1P+N	40 A
Sigen EVAC 11 4G T2 WH, Sigen EVAC 11 4G T2SH WH	3P+N	20 A
Sigen EVAC 22 4G T2 WH, Sigen EVAC 22 4G T2SH WH	3P+N	40 A

Self-supplied Cables

The grid power options include TT, TN-S, TN-C-S, and IT. Users can prepare cables according to their local grid power mode.

No.	Cable Name		Recommended Specification		
			Signen EVAC 7 4G T2 WH Signen EVAC 7 4G T2SH WH	Signen EVAC 11 4G T2 WH Signen EVAC 11 4G T2SH WH	Signen EVAC 22 4G T2 WH Signen EVAC 22 4G T2SH WH
1	AC input cable	Three-phase five-wire system (L1/L2/L3/N/PE)	-	Five-core/four-core copper core cables for outdoor use <ul style="list-style-type: none"> • Cable temperature resistance: $\geq 90^{\circ}\text{C}$ • Outer diameter: 13 mm to 20 mm • Current: 16 A • Cross-sectional area of conductor: 2.5 mm² to 4 mm² 	Five-core/four-core copper core cables for outdoor use <ul style="list-style-type: none"> • Cable temperature resistance: $\geq 90^{\circ}\text{C}$ • Outer diameter: 13 mm to 20 mm • Current: 32 A • Cross-sectional area of conductor: 6 mm²
		Three-phase four-wire system (L1/L2/L3/PE)			
		Two phases (L1/L2/PE) Single phase (L/N/PE)	Three-core copper core cables for outdoor use <ul style="list-style-type: none"> • Cable temperature resistance: $\geq 90^{\circ}\text{C}$ • Outer diameter: 13 mm to 20 mm • Current: 32 A • Cross-sectional area of conductor: 6 mm² 	-	-
2	RS485 signal cable/DO signal cable		Cables or two-core shielded twisted pair for outdoor use <ul style="list-style-type: none"> • Conductor cross-sectional area: 0.2 mm² to 1.5 mm² • Outer diameter: 5 mm to 7 mm 		
3	RJ45 network cable		Shielded twisted pair for outdoor use <ul style="list-style-type: none"> • Conductor cross-sectional area: 0.129 mm² to 0.205 mm² • Outer diameter: 5 mm to 7 mm 		
4	(Optional) PEN control line (only applicable to the UK)		Two-core copper core cables for outdoor use <ul style="list-style-type: none"> • Cable temperature resistance: $\geq 90^{\circ}\text{C}$ • Voltage requirement: $\geq 300\text{ V}/500\text{ V}$ • Cross-sectional area of conductor: 0.75 mm² to 1.5 mm² • Outer diameter: 5 mm to 7 mm 		

3 Site Selection Requirements

Tips

The warranty applies when the equipment has been installed properly for its intended use and in accordance with the operating instructions.

Installation environment


- Do not install the equipment in smoky, flammable, explosive, or corrosive environments.
- Avoid exposing the equipment to direct sunlight, rain, standing water, snow, or dust. Install the equipment in a sheltered place. Take preventive measures in operating areas prone to natural disasters such as floods, mudslides, earthquakes, and typhoons.
- Do not install the equipment in an environment with strong electromagnetic interference.
- Ensure that the temperature and humidity of the installation environment comply with the equipment's requirements.
- The equipment should be installed in an area that is at least 500 m away from corrosion sources that may result in salt damage or acid damage (corrosion sources include but are not limited to seaside, thermal power plants, chemical plants, smelters, coal plants, rubber plants, and electroplating plants).

Installation position

- Do not tilt or overturn the equipment to ensure that it is installed horizontally.
- Do not install the equipment in a place easily touched by children.
- Do not install the equipment in mobile scenarios such as RVS, cruise ships, and trains.
- You are advised to install the equipment in a position that is easy to operate, maintain, and view indicator status.
- When installing the equipment in the garage, do not install the equipment in the position where the vehicle passes through to avoid collision.


Mounting surface

- Do not install the equipment on a flammable carrier.
- The installation carrier must meet load-bearing requirements. Solid brick-concrete structure, concrete walls are recommended.
- The surface of the installation carrier must be smooth and the installation area must meet the installation space requirements.
- No water or electricity is routed inside the carrier to prevent drilling hazards during equipment installation.

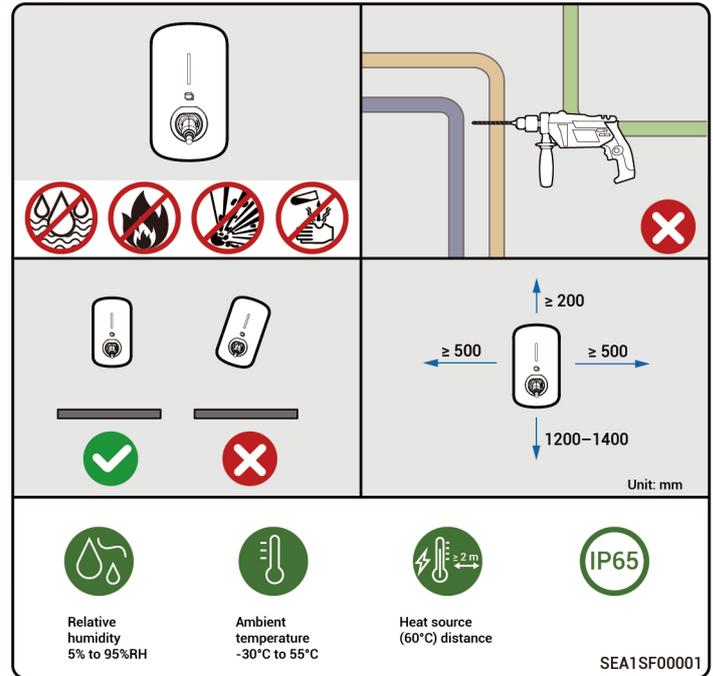


4 Installation


1 Install the wall mounting fittings.

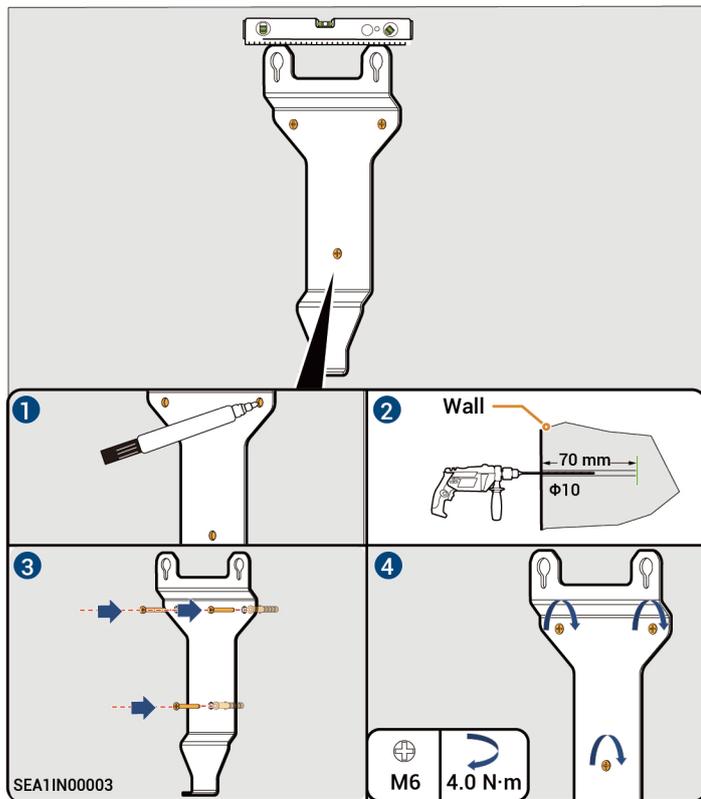

2 Take the equipment from its package and disassemble it.

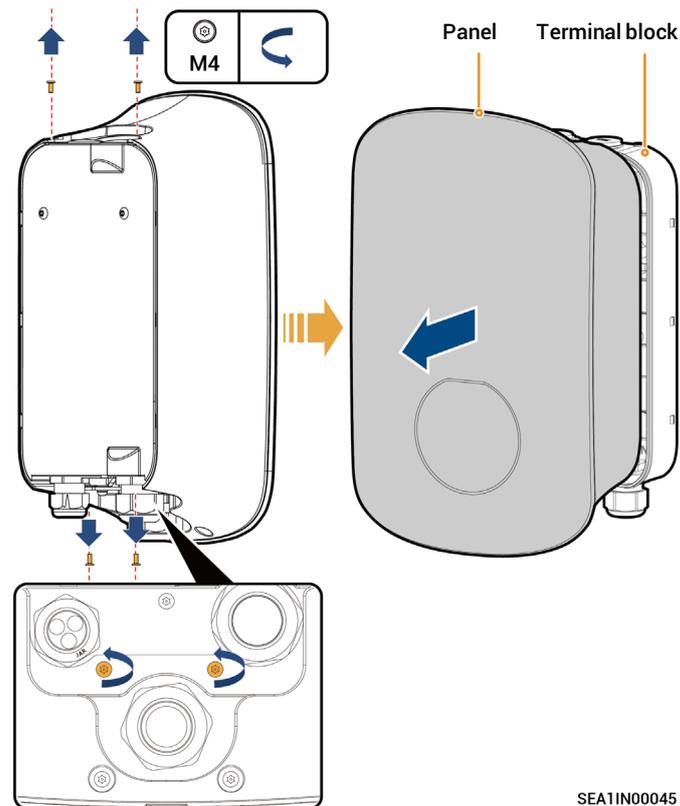

3 Install and secure the terminal block.

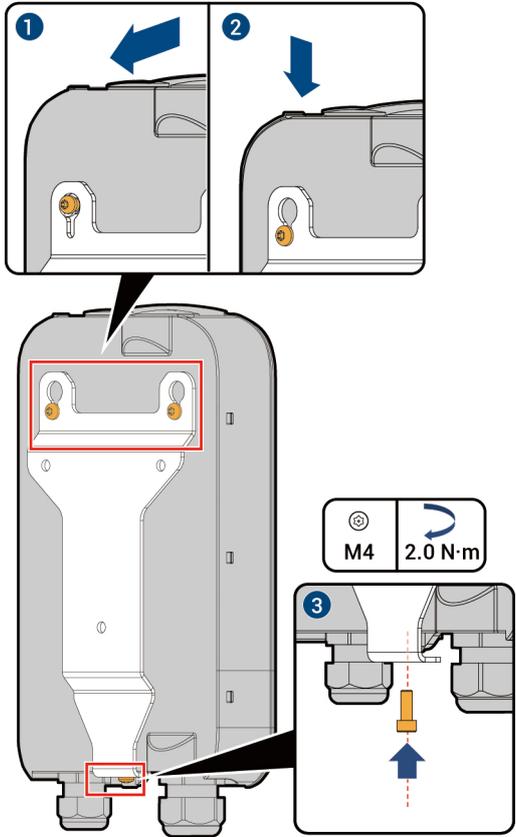

SEA1IN00004


5 Cable Connection

5.1 Description of Grid Power Supply Modes


! Danger

Signen EVAC supports the grid power supply methods shown in the diagram, please strictly refer to the diagram to connect the AC cable. The device can not operate if the connection is wrong; safety hazard can be caused if the PE wire is wrongly connected.


Single-phase three-wire system (L/N/PE)
Phase-to-neutral voltage (L-N): 230 V

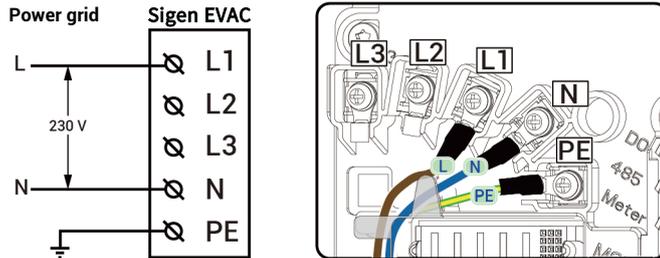


Three-phase five-wire system (L1/L2/L3/N/PE)
Phase-to-phase voltage (L-L): 400 V
Phase-to-neutral voltage (L-N): 230 V

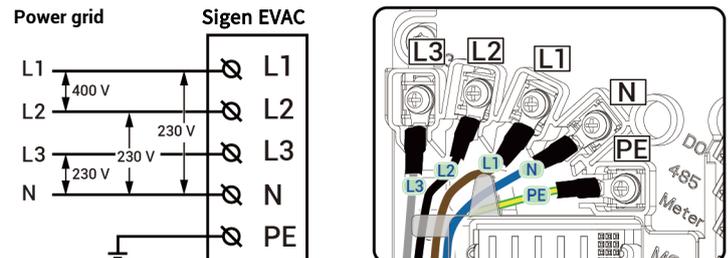

Three-phase four-wire system (L1/L2/L3/PE)
Phase-to-phase voltage (L-L): 230 V

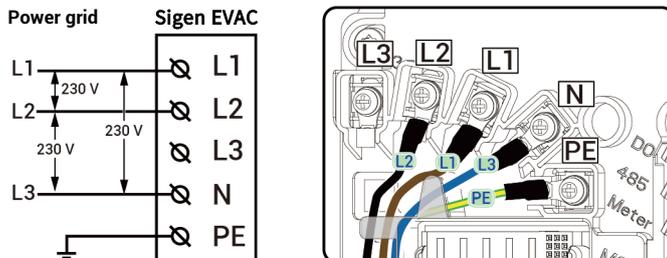

Two phases (L1/L2/PE)
Phase-to-phase voltage (L-L): 230 V

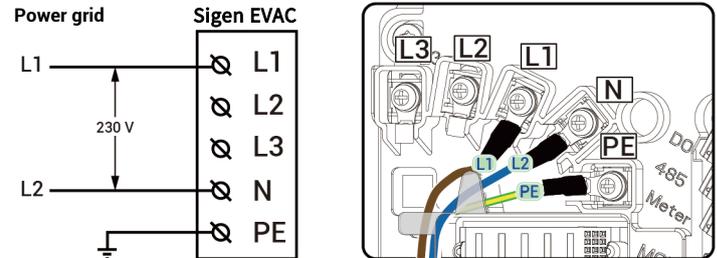


SEA11N00011

5.2 Routing

Tips

- This section describes the routing method using the three-phase five-wire system.
- You are recommended to place the PE core at the lowest layer during routing.
- Meter is a reserved port.

Bottom Routing (recommended)

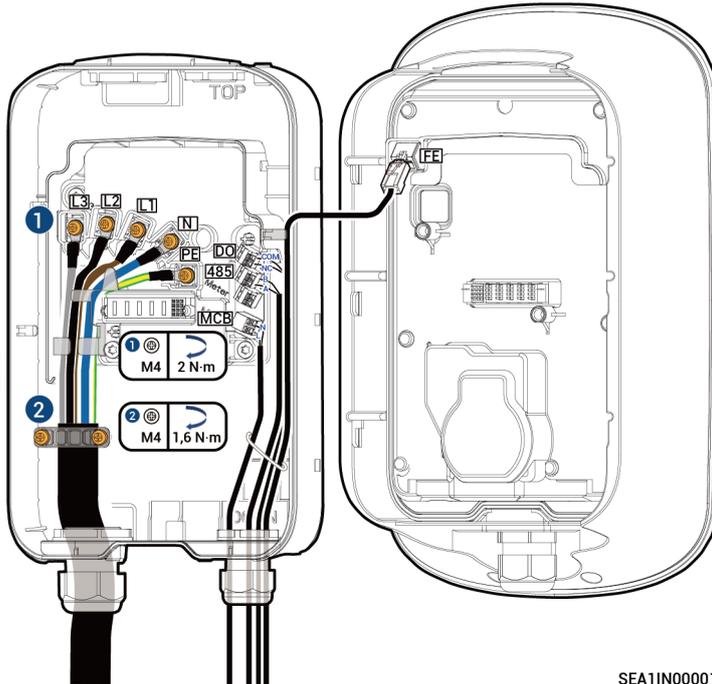


SEA1IN00001

Top Routing

Tips


When top routing is used, the equipment top should be adequately protected to prevent water ingress caused by prolonged water accumulation.

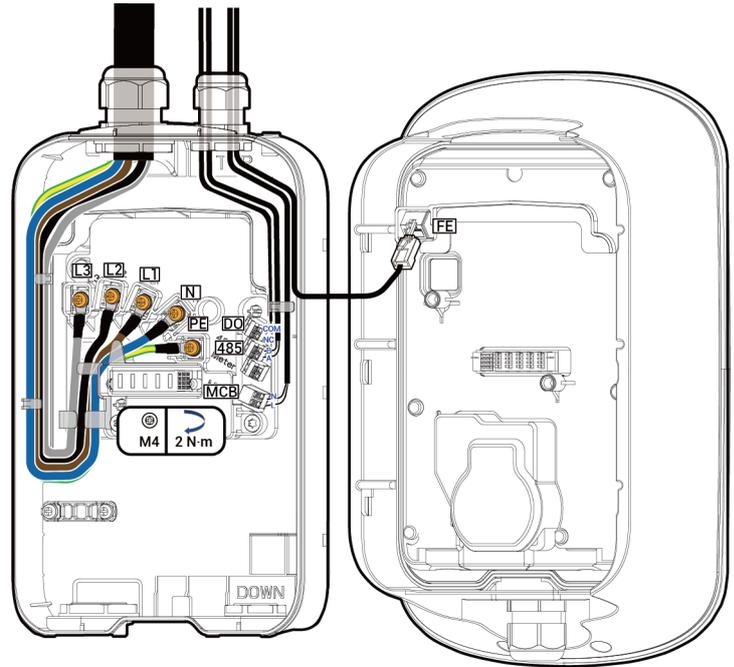

SEA1IN00005

Top Routing

Install the water-proof connector at the bottom to the top before connecting cables.

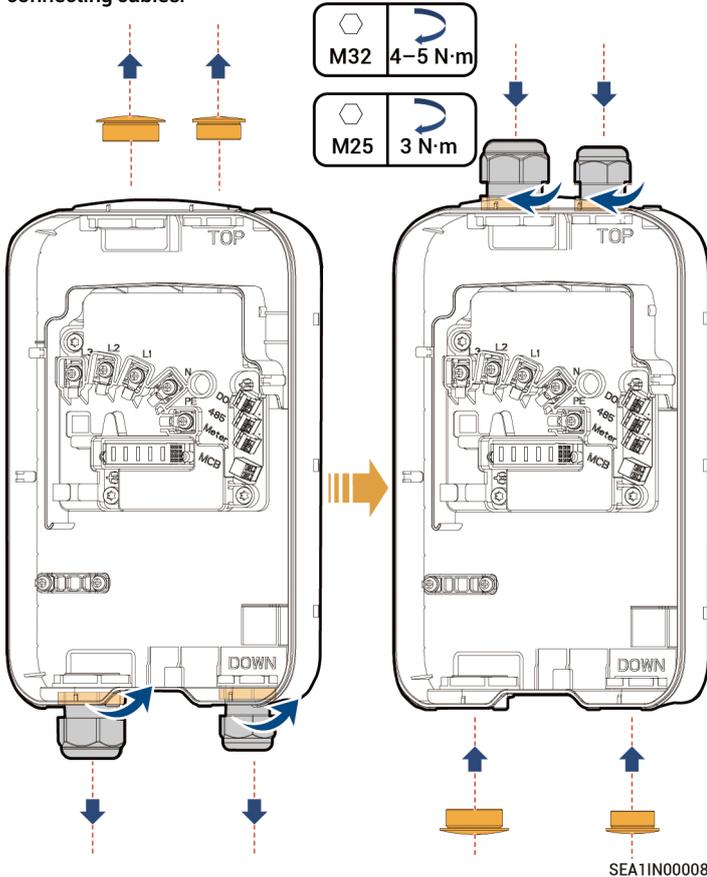

5.3 AC Input Cable Connection

This section will take three-phase five-wire system as an example to introduce the connection procedure.

1

2

A 6-8 mm

A 6-8 mm

Signen EVAC

L3	L2	L1	N	PE
----	----	----	---	----

4-6 mm²

The stripping length (A) of cable insulation is determined by the Signen EVAC port to which cables are connected.

Signen EVAC	L3	L2	L1	N	PE	
A	Top routing	330	340	350	355	360
	Bottom routing	105	110	115	125	130

3

M4 2.0 N·m

SEA11N00007

5.4 RS485/DO Signal Cable Connection

Definitions of RS485 Ports and Connection Relationship with Power Sensor

Connect one end of the RS485 signal cable to Sigen EVAC and the other end to Power Sensor.


PIN	Definitions	Sigen Sensor TP-CT120-DH (SDM630 MCT 40mA)
RS485_A	RS485 signal_A+	14
RS485_B	RS485 signal_B-	13

Tips

For appearance and connection details of the Power Sensor, refer to the User Manual supplied with the product.

Definitions of DO Port (1 A, 30 Vd.c.)

PIN	Definitions
COM	Output signal COM
NC	Output signal NC

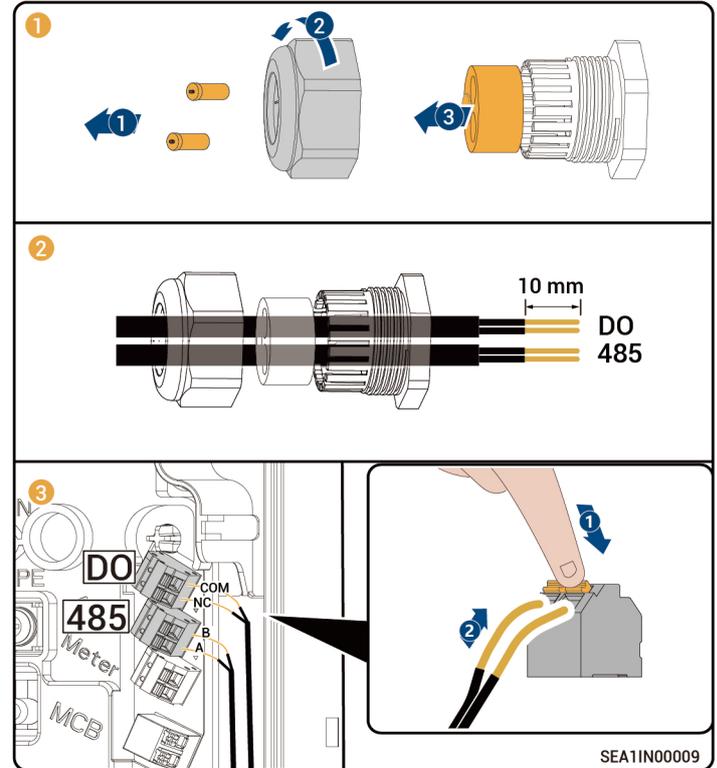


5.5 (Optional) Connection of PEN control lines

Definitions of MCB Ports and Connection Relationship with Sigen EVAC Smart PEN Breaker

PIN	Definitions	Sigen EVAC Smart PEN Breaker ^[1]
N	Output N level	Terminal C1
L	Output L level	Terminal C2


Note [1]: The corresponding wiring terminal of the Sigen EVAC Smart PEN Breaker

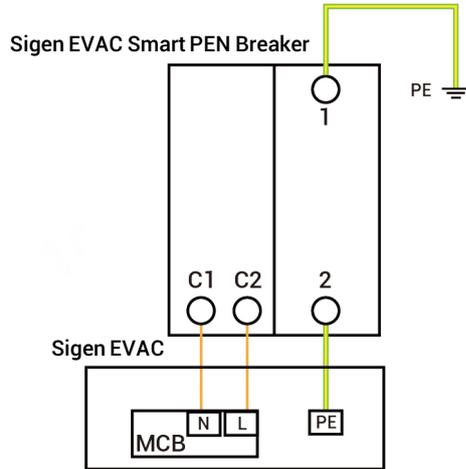

SEA10V00009


Tips

For the information of appearance, installation, and wiring of Sigen EVAC Smart PEN Breaker, refer to the marking on the equipment.

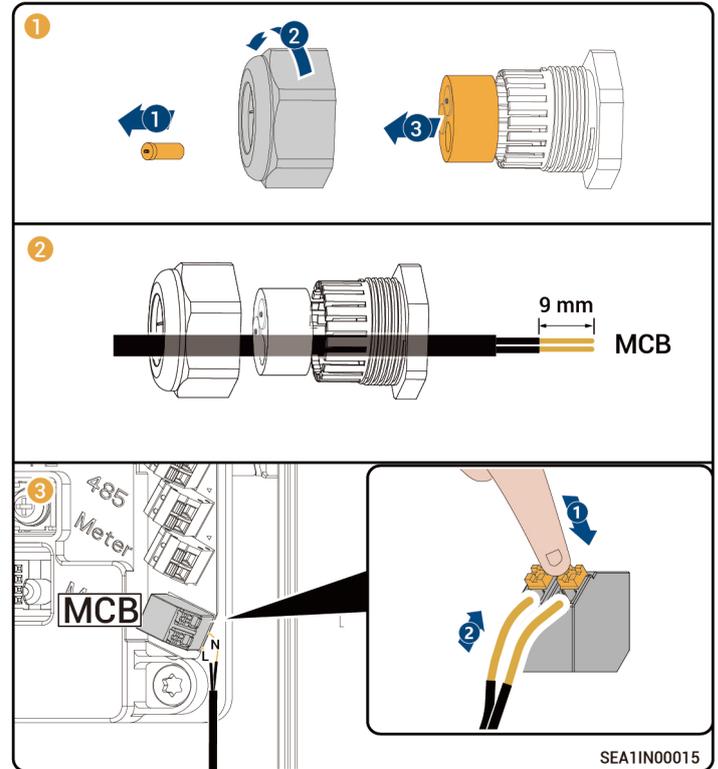

5.6 FE Signal Cable Connection


Connect one end of the FE signal cable to Sigen EVAC and the other end to a router.

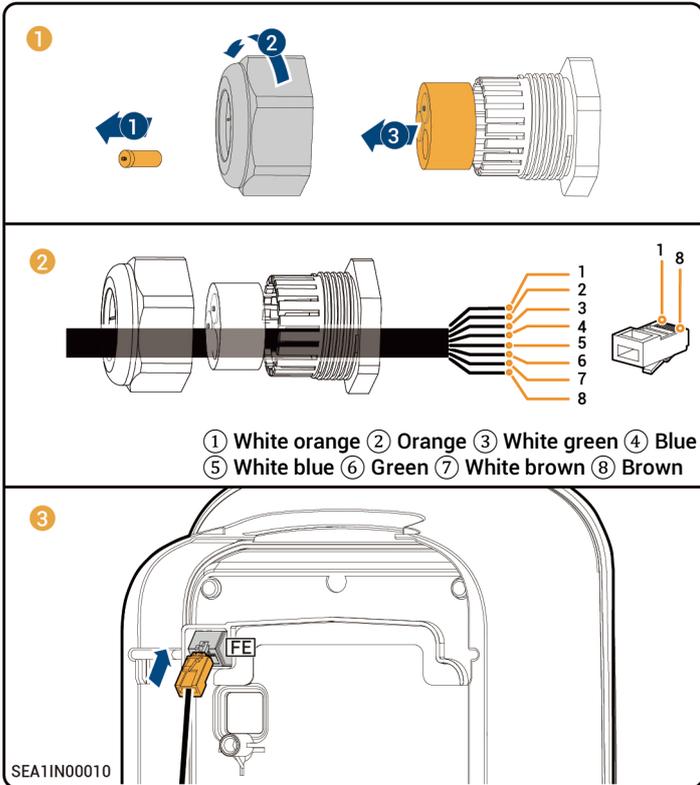

5.7 Installation of SIM Card

Tips


- Install the SIM card when 4G communication is enabled.
- SIM cards are supplied by users and standard SIM cards are recommended (size: 25 mm×15 mm, capacity ≥ 64 KB, traffic ≥ 128 MB/month).

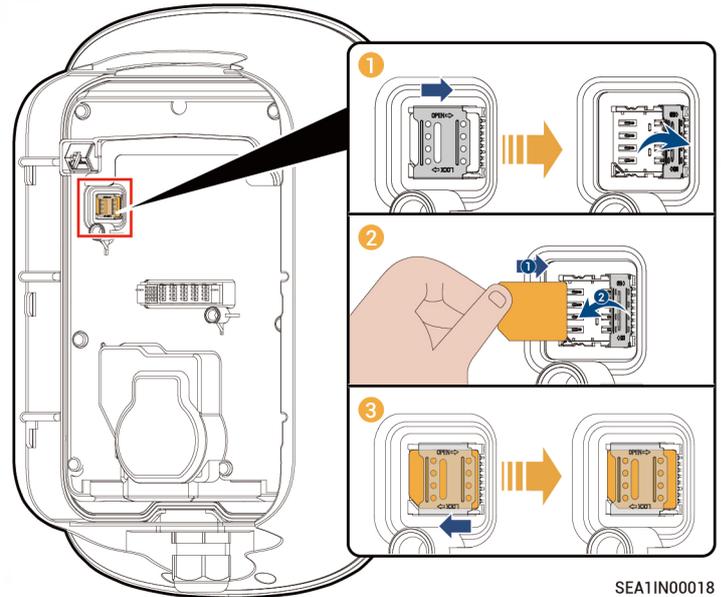

5.8 Installing Panel

Check the following items against the provided table, tighten routing holes, and install the panel.

No.	Check Item
1	The equipment is securely installed.
2	AC cables and signal cables are properly connected without omission.
3	Lock screws or terminals are installed in place without any looseness.
4	Cutouts of cable ties are free of burr or sharp edges.
5	Unused ports are protected with water-proof covers or plugs.
6	No construction residue inside and outside the equipment.

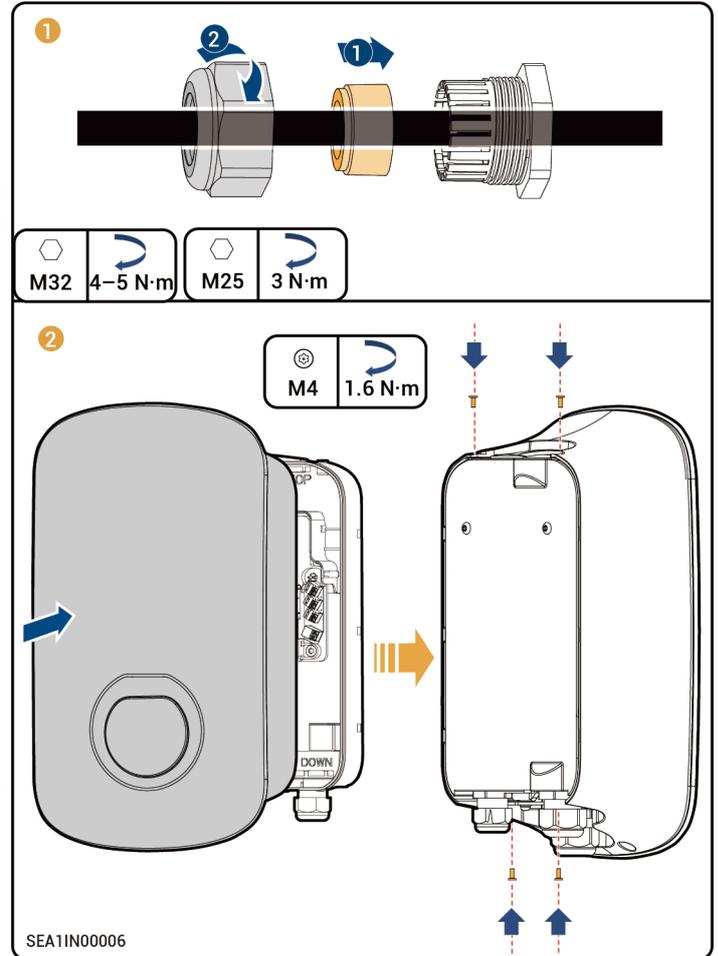


5.9 Installing Cable Holder and Placing Charging Connector


Tips

This section applies only to Sigen EVAC 7/11/22 4G T2 WH.

- 1 Install the cable holder.

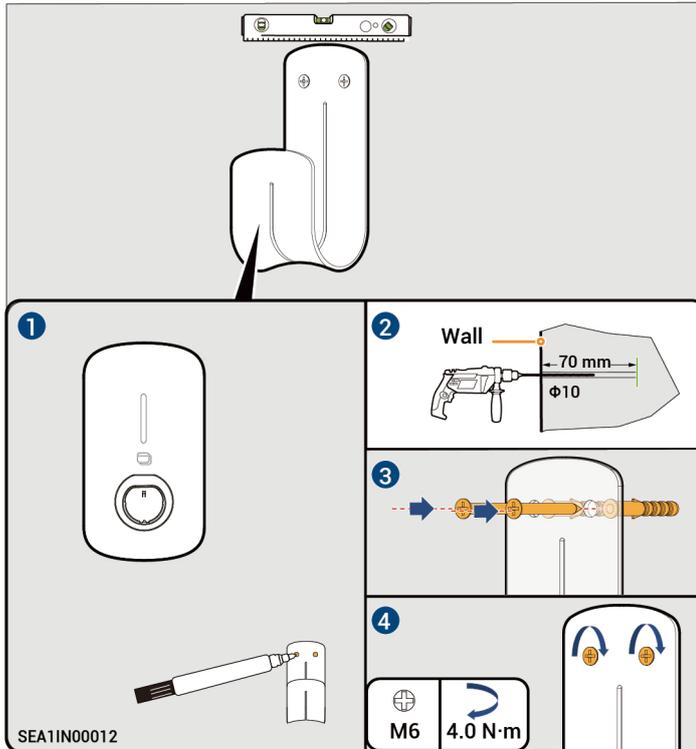


- 2 Place the charging connector.

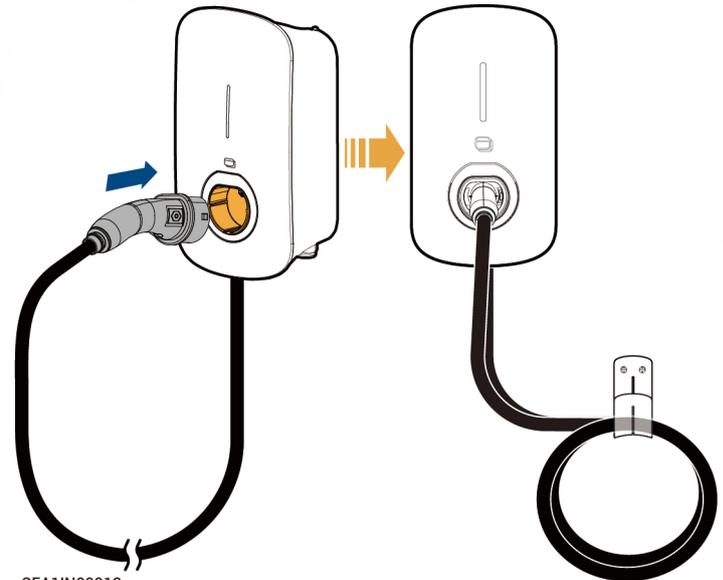

6 Power-on

1. Turn on the pre-AC switch.
2. Observe the indicator status on the front panel of Sigen EVAC to understand the operating conditions.
3. When the indicator turns green and is steady on or breathing blinking, create a new system in the mySigen app.




Illuminated Indicator	Color	Status	Meaning
All	Multicolored	Steady on	Starting, initializing configuration.
1		Steady on	In standby mode. Not connected to the internet, charging connector not inserted into the vehicle.
1		Breathing blink	In standby mode. Connected to the internet, charging connector not inserted into the vehicle.
All		Steady on	<ul style="list-style-type: none"> • RFID card not read. The charging connector is connected to the vehicle. • Charging completed.
All		Breathing blink	You have registered the charging time, and the charging connector has already been connected to your vehicle.
All		Blink	RFID card read. Get ready to charge vehicles.
All		Flowing blink	Charging.
None	-	-	Not powered on or low voltage.
1		Blink	Equipment electrical leakage.
1		Steady on	Relays within the equipment getting stuck.
1, 2		Blink	Overvoltage or undervoltage protection.
1-3		Blink	Overcurrent protection.
1-4		Blink	Overtemperature protection.
1-5		Blink	Grounding fault.
All		Blink	Communication failure between the equipment and the vehicle.
1, 2		Steady on	Other malfunctions.

7 New System Creation

- 1 Please visit <https://www.sigenergy.com> and go to "Partner" → "Register Now" and sign up for your account.
- 2 Download the mySigen app to initiate the creation of a new system for your equipment.



7.1 Networking of the Charger

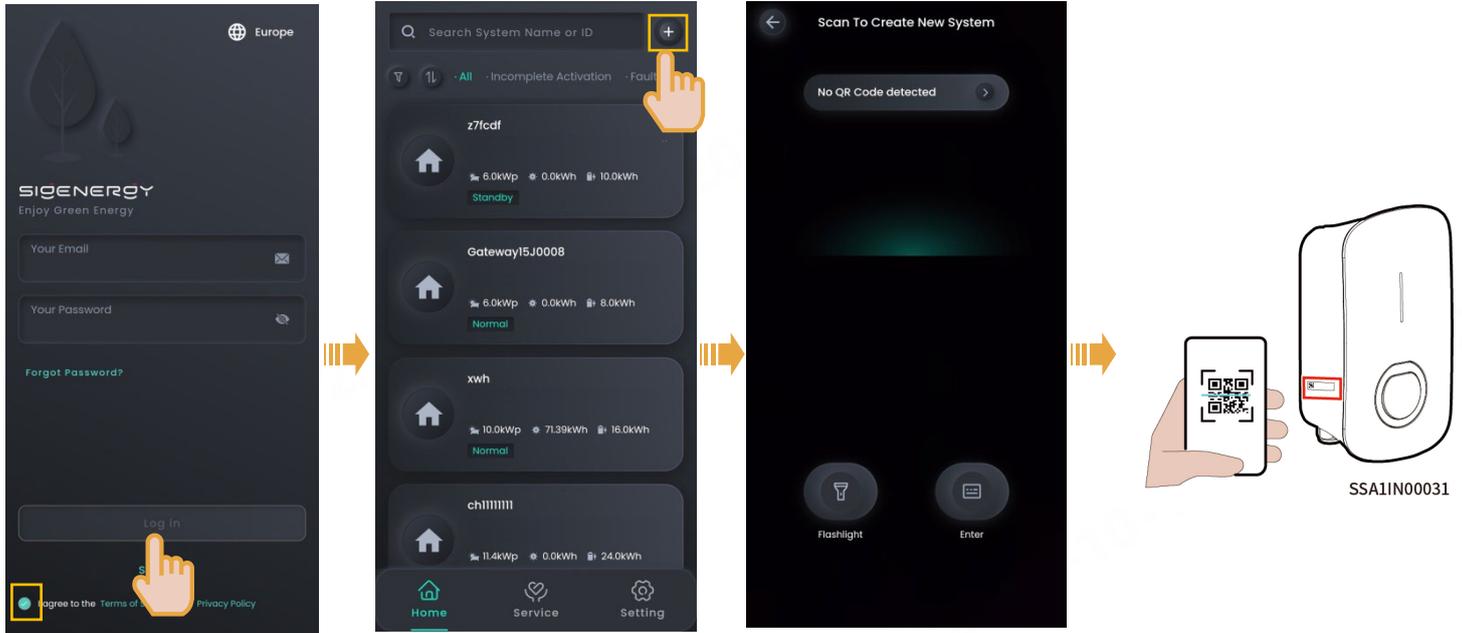

Tips

The following steps are different when the equipment has already been connected or not connected to the internet (that is, FE and 4G communication fault), as described below.

Already connected to the internet

← Add New System

1 2 3 4

Basic
and lower case letters and English brackets.

System Location

Use your location; mySigen will use location permission to show the system position information.

Timezone
(UTC-6:00)Easter Island

Summer Time

Owner Details

First Name

Last Name

Email

The owner will use this email address as login credentials for the mySigen App. Please remind the owner to check their email after the add new system process.

Next

Manually locate the address, set the Timezone, and enter Owner Details.

← Add New System

1 2 3 4

Devices

AC charger
SN:KDK****2333

AC charger
● Normal

All the software version has been upgraded to the latest.

I confirm all the devices have been added to the system.

Next

Perform upgrades where necessary.

← Add New System

1 2 3 4

Parameters

Grid Code
EGC_G98

Ground type
TN

Rated Household Circuit Breaker Current (A)

Input Circuit Breaker Current (A)

Next

Set parameters as needed.

- Rated Household Circuit Breaker Current > Input Circuit Breaker Current
- When connected to two phases (L1/L2/PE), Ground type should be set to IT system.

← Add New System

1 2 3 4

Confirm

System Location

User Name xxxx xxxx

Email xxxx@qq.com

Timezone Pacific/Easter

2 Devices

Device SN KDK****2333

Grid Code EGC_G98

Ground type TN

Rated Household Circuit Breaker Current 32 A


Input Circuit Breaker Current 25 A

Default Output Charging Current 24 A

Confirm

3 After creating a new system, the installer should ask the owner to check the email sent from "sigencloud" within 24 hours to activate the account, log in to the app, and bind the RFID card.

Not connected to the internet (that is, FE and 4G communication fault)

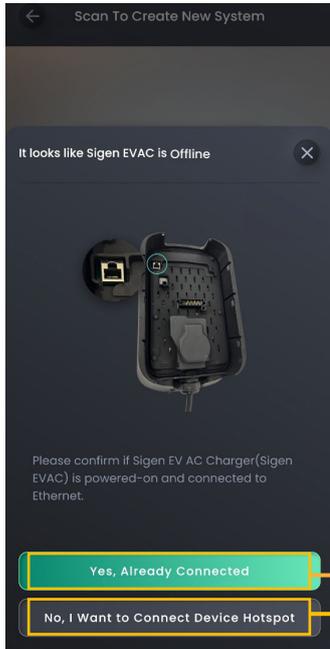


Click this button if the equipment is still not connected to the internet



Connect to the equipment's WLAN hotspot. The hotspot is named as equipment SN and the passcode is given on the UI.

If the equipment has already been connected to the internet, click this button and go to the Create New System page and perform operations by referring to the description in the "already connected to the internet" section.

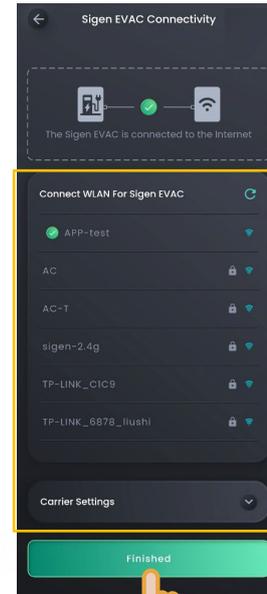

If the WLAN hotspot at the owner's premises is connected or if the SIM card APN is set (the device has a SIM card installed), click "Finished" to go to the page for creating new systems. You can refer to the description in the "already connected to the internet" section

If there is no available WLAN hotspot at the owner's premises, or if the device has no SIM card installed, click "Finished" and follow the on-screen instructions to proceed

← Add New System

1 2 3 4

Basic
and lower case letters and English brackets.

System Location

Use your location; mySigen will use location permission to show the system position information.

Timezone
(UTC-6.00)Easter Island

Summer Time

Owner Details

First Name

Last Name

Email

The owner will use this email address as login credentials for the mySigen App. Please remind the owner to check their email after the add new system process.

Next

Set the Timezone, and enter Owner Details.

← Add New System

1 2 3 4

Devices

Charger
SNKDK111222333



Charger
Normal

Your Software of Sigen EVAC is up to date.

I confirm all the devices have been added to the system.

Next

← Add New System

1 2 3 4

Parameters

Grid Code
EGC_G98

Ground type
TN

Rated Household Circuit Breaker Current (A)

Input Circuit Breaker Current (A)

Next

Set parameters as needed.

- Rated Household Circuit Breaker Current > Input Circuit Breaker Current
- When connected to two phases (L1/L2/PE), Ground type should be set to IT system.

← Add New System

1 2 3 4

Confirm

System Location

User Name xxxx xxxx

Email xxxx@qq.com

Timezone Pacific/Easter

2 Devices

Device SN KDK****2333

Grid Code EGC_G98




Ground type TN

Rated Household Circuit Breaker Current 32 A

Input Circuit Breaker Current 25 A

Default Output Charging Current 24 A

Confirm

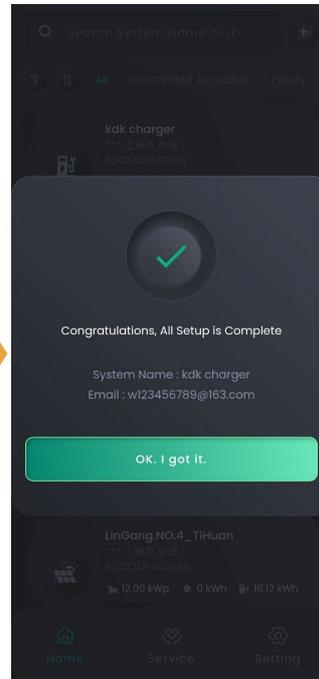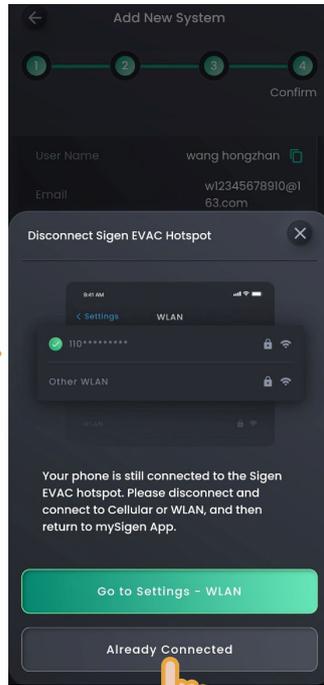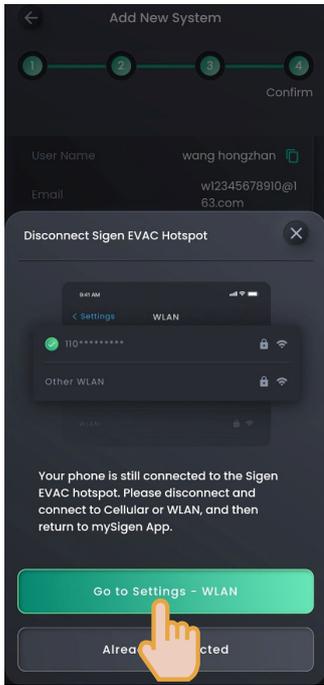

Disconnect from the WLAN hotspot

- 3 After creating a new system, the installer should ask the owner to check the email sent from "sigencloud" within 24 hours to activate the account, log in to the app, and bind the RFID card.

7.2 PV Charging or PV Storage & Charging Networking


Tips


- The screen for creating new systems differs slightly between PV charging and PV storage & charging networking, but the operations are the same. The illustrations here are for reference only. The actual screen display shall prevail.
- Sigen EVAC can be installed and set up alongside other PV charging or PV storage and charging networking devices to create new systems, and can also be added to existing PV charging or PV storage & charging stations. Please refer to the relevant content based on the actual situation.

7.2.1 FE communication

Before creating new systems, please check that Sigen EVAC is connected to our inverter with the Fast Ethernet network cable.

Creating New Systems in Both Sigen EVAC and Other Devices

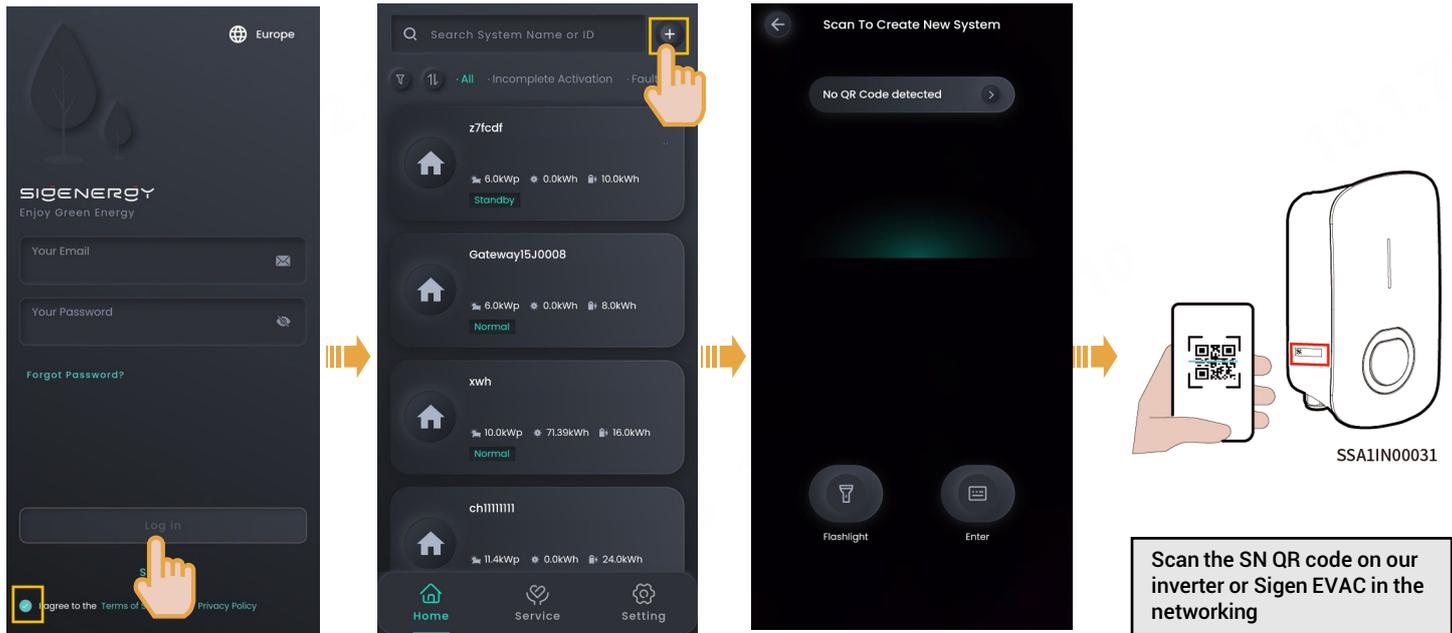


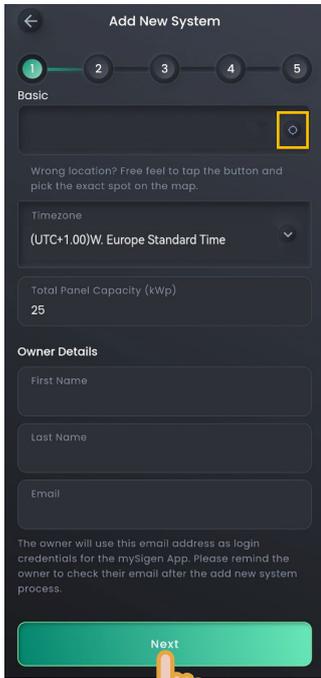

Manually locate the address, set the Timezone, and enter Owner Details.




Perform upgrades where necessary.

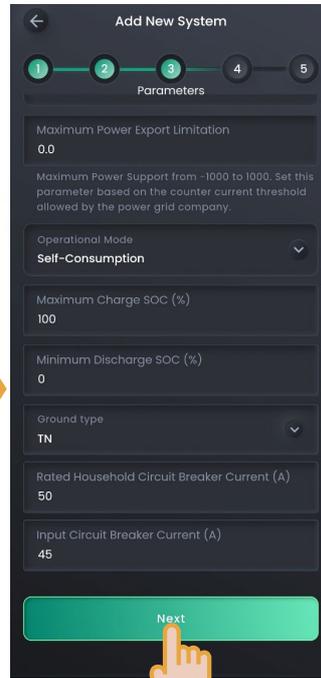

Set parameters as needed.

- Rated Household Circuit Breaker Current > Input Circuit Breaker Current
- When connected to two phases (L1/L2/PE), Ground type should be set to IT system.

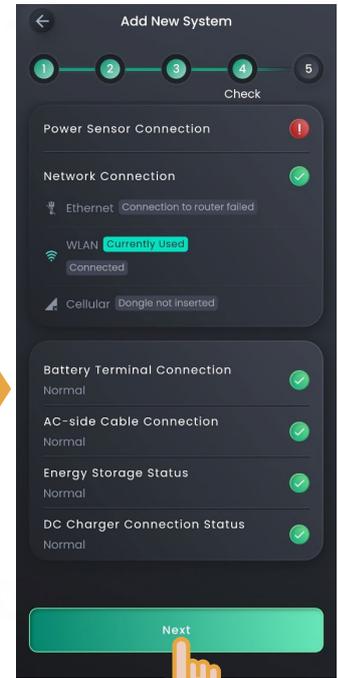

← Add New System

1 2 3 4 5
Confirm

1 Basic Info 

System Name 

System Location

User Name jjdnd zjzdk 

Email w123456789102008@163.com

Total Panel Capacity 25 kWp

Timezone Asia/Shanghai

Grid Code EGC_VDE_AR_N_4105

Export Limitation

Maximum Power Export Limitation 0.0 kW

Operational Mode Self-Consumption

Maximum Charge SOC 100%

Minimum Discharge SOC 0%

Ground type TN


Rated Household Circuit Breaker Current 50A



Input Circuit Breaker Current 45A

To modify the parameter values you set before, click to confirm the modification and create new systems 

- 3 After creating a new system, the installer should ask the owner to check the email sent from "sigencloud" within 24 hours to activate the account, log in to the app, and bind the RFID card.

Adding Sigen EVAC to an Existing Power Station

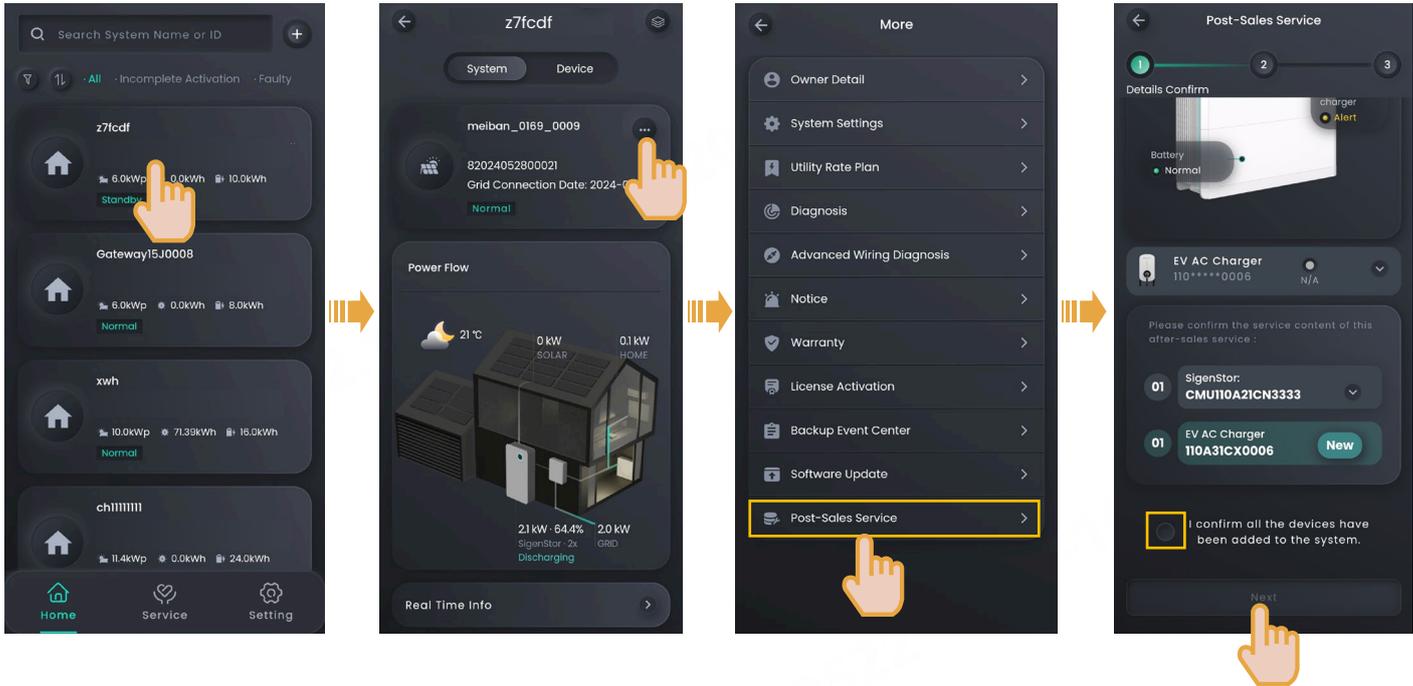

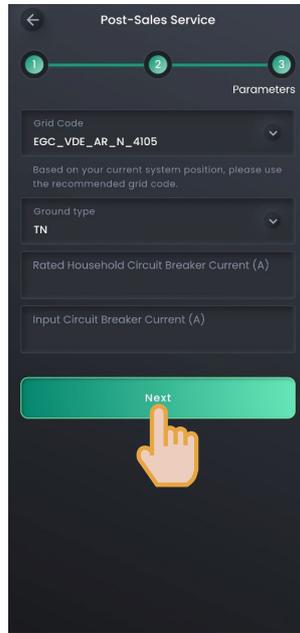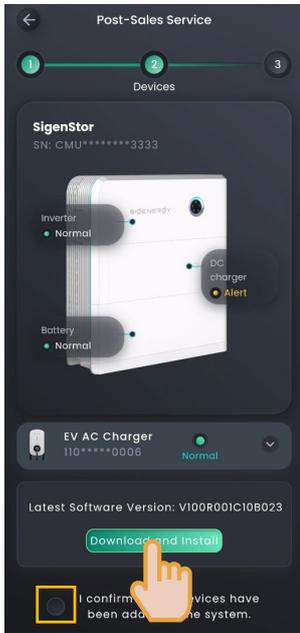


Perform upgrades where necessary.



Set parameters as needed.

- Rated Household Circuit Breaker Current > Input Circuit Breaker Current
- When connected to two phases (L1/L2/PE), Ground type should be set to IT system.

7.2.2 WLAN communication




Sign EVAC connects to the same router WLAN hotspot as the inverter.

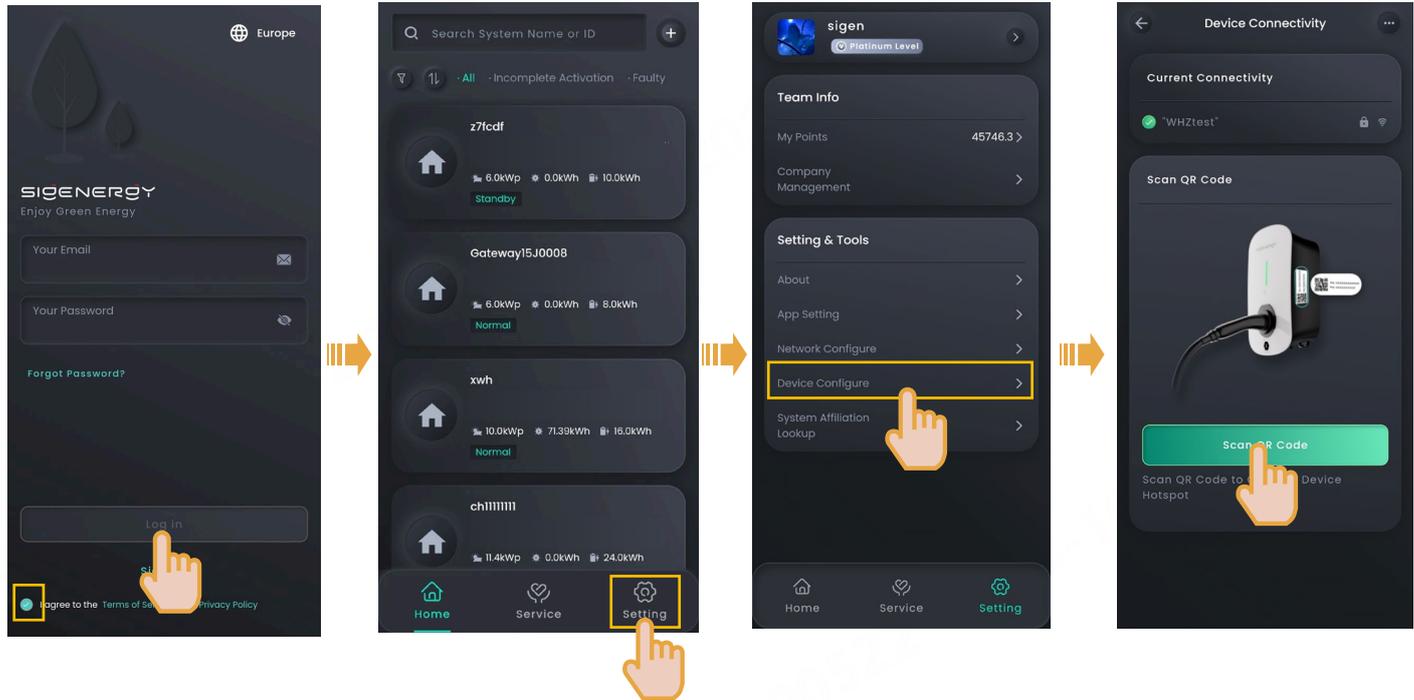

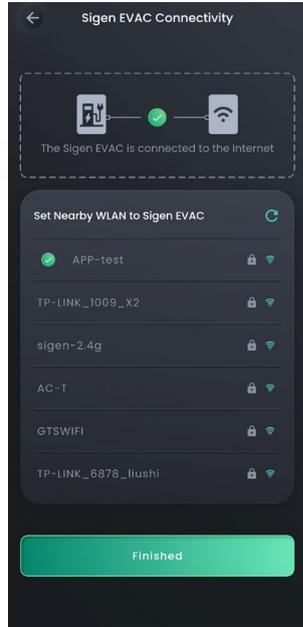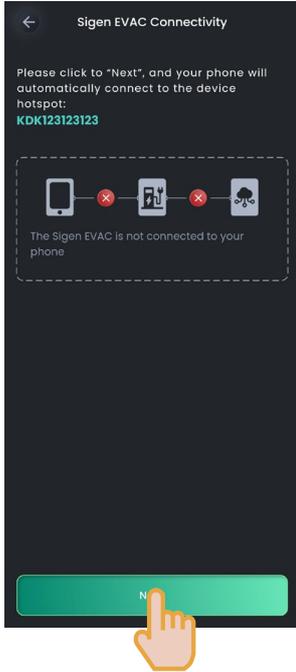


- After connecting to the owner's router WLAN hotspot, click "Finished."
- Sigen EVAC connects to the same router WLAN hotspot as the inverter.

Creating New Systems in Both Sigen EVAC and Other Devices

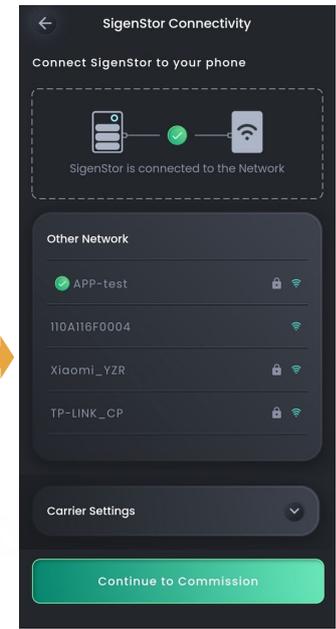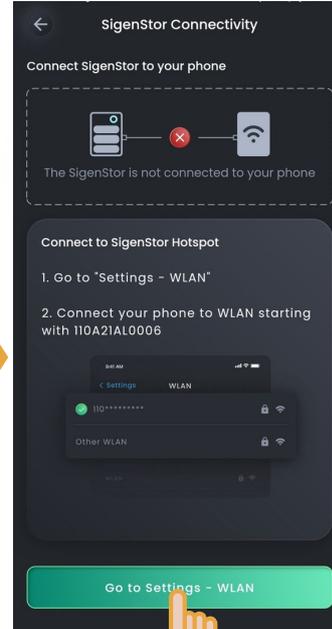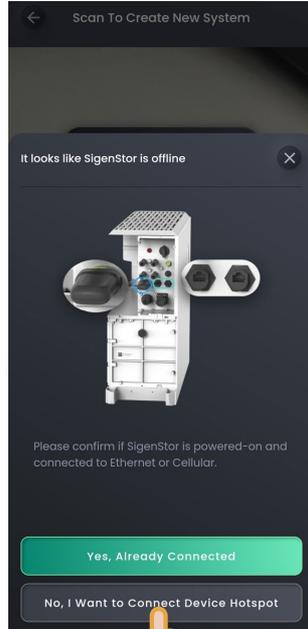


- After connecting to the owner's router WLAN hotspot, click "Continue to Commission."
- Sigen EVAC connects to the same router WLAN hotspot as the inverter.

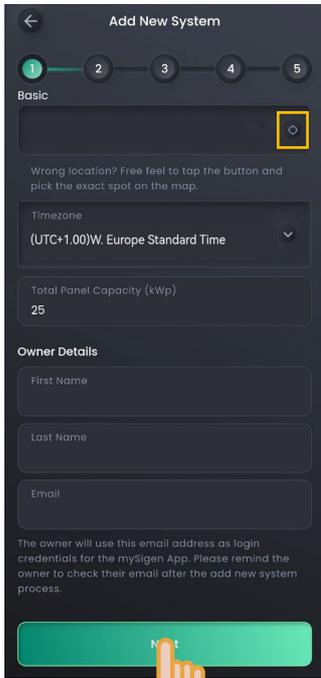

Manually locate the address, set the Timezone, and enter Owner Details.




Perform upgrades where necessary.

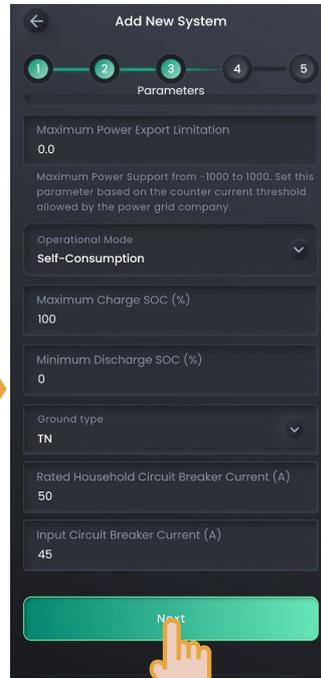

Set parameters as needed.

- Rated Household Circuit Breaker Current > Input Circuit Breaker Current
- When connected to two phases (L1/L2/PE), Ground type should be set to IT system.

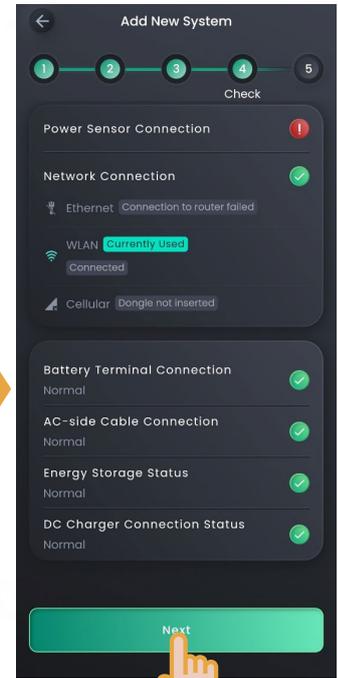

← Add New System

1 2 3 4 5
Confirm

1 Basic Info 

System Name 

System Location

User Name jjdnd zjzdk 

Email w123456789102008@163.com

Total Panel Capacity 25 kWp

Timezone Asia/Shanghai

Grid Code EGC_VDE_AR_N_4105

Export Limitation

Maximum Power Export Limitation 0.0 kW

Operational Mode Self-Consumption

Maximum Charge SOC 100%

Minimum Discharge SOC 0%

Ground type TN

Rated Household Circuit Breaker Current 50A


Input Circuit Breaker Current 45A



To modify the parameter values you set before, click to confirm the modification and create new systems 

- 3 After creating a new system, the installer should ask the owner to check the email sent from "sigencloud" within 24 hours to activate the account, log in to the app, and bind the RFID card.

Adding Sigen EVAC to an Existing Power Station

The inverter uses WLAN communication, and Sigen EVAC connects to the same router WLAN hotspot as the inverter.

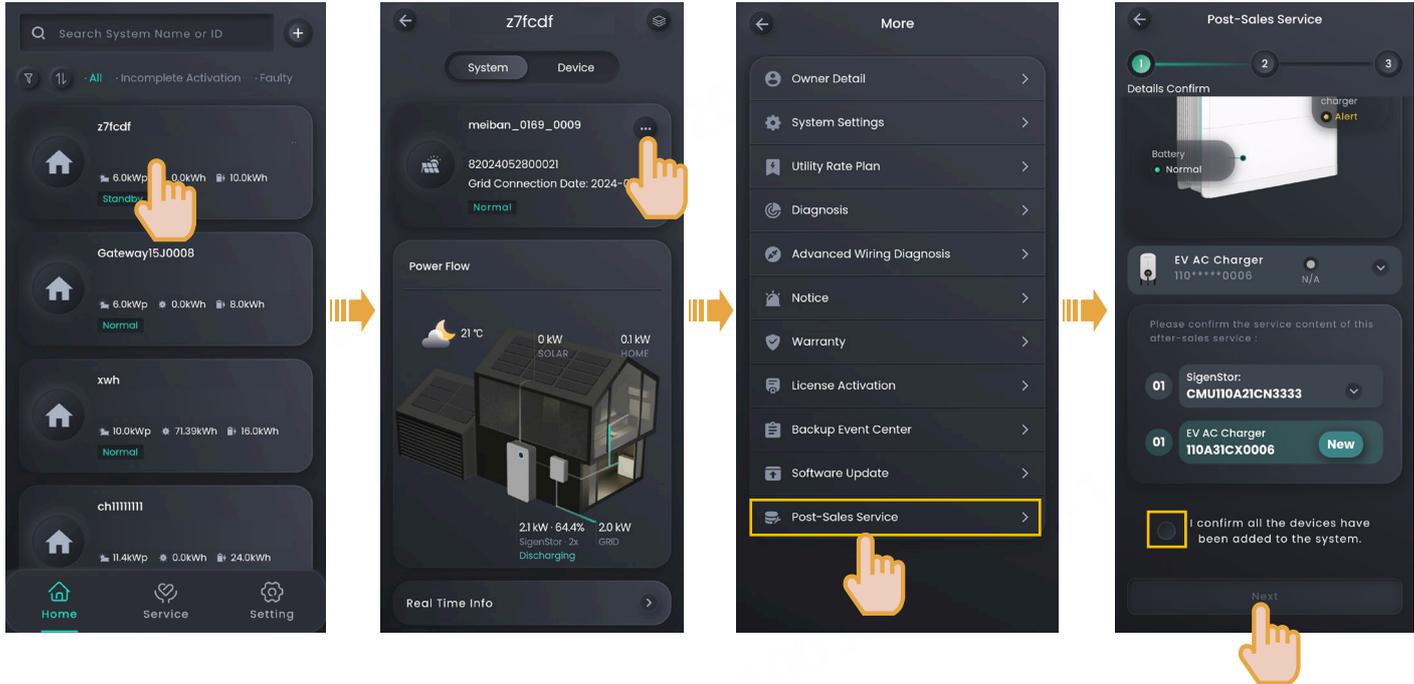

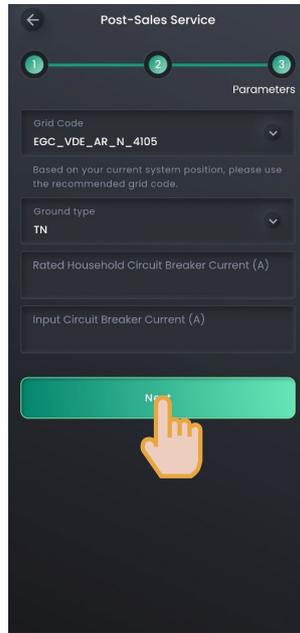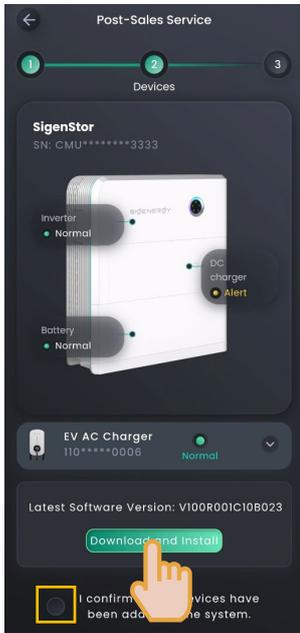

Perform upgrades where necessary.

Set parameters as needed.

- Rated Household Circuit Breaker Current > Input Circuit Breaker Current
- When connected to two phases (L1/L2/PE), Ground type should be set to IT system.

Sigenergy Technology Co., Ltd.



Website

LinkedIn

YouTube

www.sigenergy.com



Copyright © Sigenergy Technology Co., Ltd. 2024. All rights reserved.

Description in this document may contain predictive statements regarding financial and operating results, product portfolio, new technology, configurations and features of product. Several factors could cause difference between actual results and those expressed or implied in the predictive statements. Therefore, description in this document is provided for reference purpose only and constitutes neither an offer nor an acceptance. Sigenergy Technology Co., Ltd. may change the information at any time without notice.